


# CAN-SL

Multi-function module for Alarm and Remote-Starter using CAN protocols

Module multi-fonctions pour Alarme et Démarreur à Distance sur protocoles CAN

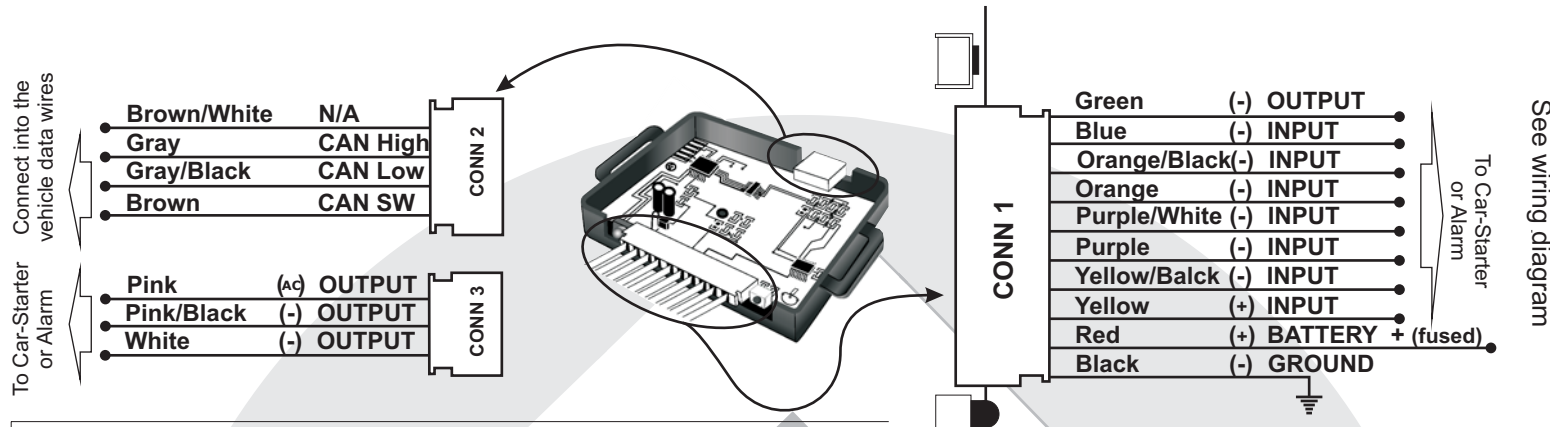


See wiring diagram

### PROGRAMMING SEQUENCE:

Press the programming switch while inserting the main wires harness (CONN 1) into the CAN-SL module. The LED will illuminate to indicate you are in programming mode, release the programming button. Connect the other connectors (CONN 2 and CONN 3) and turn the ignition to the "ON" position. Once the LED starts to flash rapidly turn the key to the OFF position. \*The LED will turn off to indicate the module has been programmed. The module is now ready for use.

\* For Chrysler/Dodge/Jeep models, the LED will flash until you press the OEM remote lock button. The LED will turn off to indicate the module has been programmed. The module is now ready for use.

Neither the manufacturer or distributor of this module is responsible for damages of any kind either indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

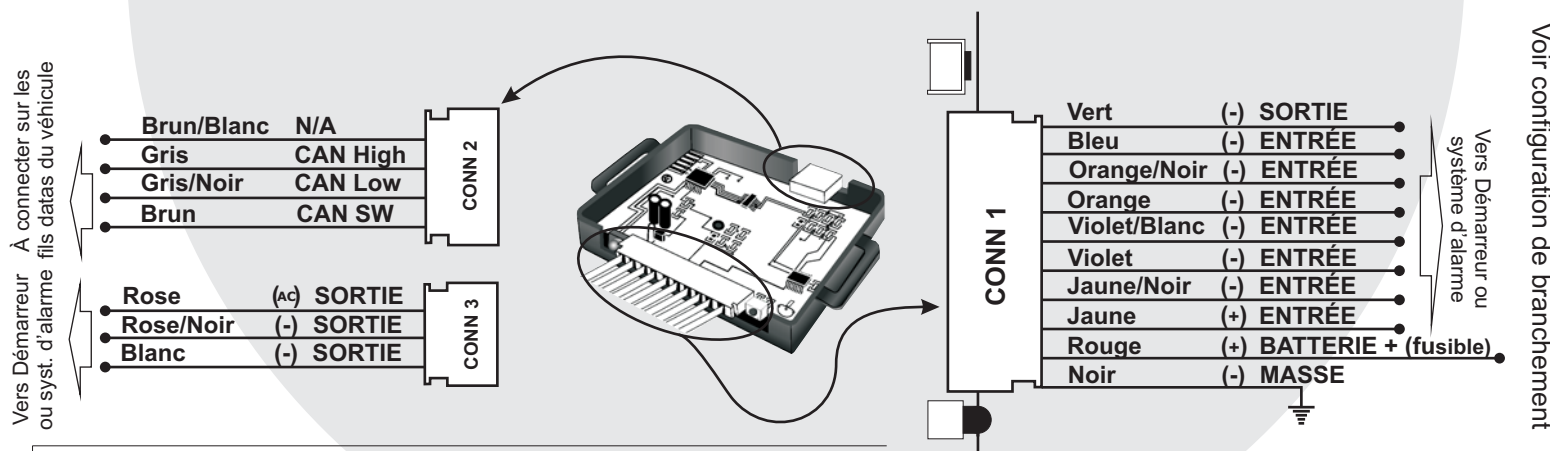

Voir configuration de branchement

### SÉQUENCE DE PROGRAMMATION :

Une fois les branchements appropriés effectués, maintenir le bouton de programmation enfoncé et brancher le connecteur principal (CONN 1) dans le module CAN-SL. Le LED sera allumé pour indiquer la programmation. Relâcher le bouton de programmation, brancher les autres connecteurs (CONN 2 et CONN 3) et tourner la clé en position IGNITION. Lorsque le LED clignotera rapidement, tournez la clé en position OFF.\* Le LED s'éteint indiquant que le module est maintenant programmé et prêt à fonctionner.

\* Pour les modèles Chrysler/Dodge/Jeep, le led continuera à clignoter après avoir fermé le contact. Appuyer sur le bouton lock de la télécommande d'origine pour compléter la programmation. Le led s'éteindra à ce moment.

Ni le fabricant, ni le distributeur ne se considèrent responsables des dommages causés ou ayant pu être causés, indirectement ou Directement, par ce module, excepté le remplacement de ce module en cas de défectuosité de fabrication.

See web site for latest information/ Voir site web pour les dernières informations

**Technical Support: Support Technique:**  
 TEL: 514-255-0446 FAX: 514-255-1367  
 Web: <http://support.fortinautoradio.com>

**Part No. : CAN-SL**  
**Version : 1.0d**  
**Revision : Oct. 27 2005**

Made in Canada - Fait au Canada

Manufactured under US patent No.:  
 Manufacturé sous brevet US No.:  
 5,719,551 6,011,460 B1  
 6,243,004 B1 6,249,216 B1  
 6,275,147 B1 6,529,124 B2  
 6,696,927 B2 6,756,885 B1  
 6,756,886 B2 6,771,167 B1  
 Canadian Patent No.: 2,415,023  
 Brevet Canadien No.: 2,320,248  
 European Patent No.:  
 Brevet Européen No.:1,053,128

Vehicles Info							Functions														Data Info															
Vehicles	Years						Door Lock	Door Unlock	Factory Alarm Arm	Factory Alarm Disarm	Trunk/Hatch release	Sliding Doors (2)	Gas Door release	Radio Off control	Engine Tach Output (RAP)	Door Trigger	Trunk Trigger	Hood Trigger	Parking Light Control	Heated Seats	Rear Defrost	Future Use				Data CAN + -	Data Can SW	Wiring Schematic Configuration	Vehicle Data Wire Colors	Vehicle Data Wire Location						
	98	99	00	01	02	03	04	05	06																											
<b>Honda</b>																																				
Accord							•	•	•	•	•			•	•	•	•						•	•	2	Brown/Red	Wires in driver kick panel, PIN-4, bottom row of 21-pin GREEN plug.									
Odyssey							•	•	•	•	•			•	•	•	•						•	•	1	Green/Red										
Ridgeline																								•	•	2		Brown/Black								
<b>Acura</b>																																				
TL							•	•	•	•	•			•	•	•	•							•	•	2	Brown/Black									
TSX							•	•	•	•	•			•	•	•	•						•	•	2	Brown/Black										
<b>VW</b>																																				
Beetle							•	•	•	•	•			•	•	•	•							•	•	3		Twisted Pair Wires in driver kick panel								
Golf							•	•	•	•	•			•	•	•	•						•	•	3											
Jetta							•	•	•	•	•			•	•	•	•						•	•	3											
Jetta							•	•	•	•	•			•	•	•	•						•	•	4	High: Orange/Green Low: Orange/Brown										
Passat							•	•	•	•	•			•	•	•	•						•	•	3											
Passat							•	•	•	•	•			•	•	•	•						•	•	5											
Touareg							•	•	•	•	•			•	•	•	•						•	•	5											
<b>Audi</b>																																				
A3														•	•	•	•							•	•	4		Twisted Pair Wires in driver kick panel								
A4							•	•	•	•	•			•	•	•	•						•	•	5											
A6														•	•	•	•						•	•	4	High: Orange/Green Low: Orange/Brown										
S4							•	•	•	•	•			•	•	•	•						•	•	5											
<b>Porsche</b>																																				
Cayenne							•	•	•	•	•			•	•	•	•							•	•	5										
<b>Chrysler/Dodge/Jeep</b>																																				
Durango							•	•	•	•	•			•	•	•	•							•	•	9		Twisted Pair Wires under steering wheel column								
Magnum							•	•	•	•	•			•	•	•	•						•	•	9											
300							•	•	•	•	•			•	•	•	•						•	•	9											
300C							•	•	•	•	•			•	•	•	•						•	•	9											
Cherokee							•	•	•	•	•			•	•	•	•						•	•	9											
Charger							•	•	•	•	•			•	•	•	•						•	•	9											
Ram							•	•	•	•	•			•	•	•	•						•	•	9											
Dakota							•	•	•	•	•			•	•	•	•						•	•	9											
<b>Volvo</b>																																				
S40							•	•	•	•	•			•	•	•	•							•	•	10		<p>2005 + : High: Pin3 OBDII Low: Pin11 OBDII</p> <p>2004 - : High: White Low: Green</p>								
S60							•	•	•	•	•			•	•	•	•						•	•	6											
S80							•	•	•	•	•			•	•	•	•						•	•	6											
V50							•	•	•	•	•			•	•	•	•						•	•	10											
V70							•	•	•	•	•			•	•	•	•						•	•	6											
XC70							•	•	•	•	•			•	•	•	•						•	•	6											
XC90							•	•	•	•	•			•	•	•	•						•	•	6											
<b>Infiniti</b>																																				
M35							•	•	•	•	•			•	•	•	•							•	•	7		<p>High: Pin6 OBDII Low: Pin14 OBDII</p> <p>High: Blue Low: Pink</p>								
M45							•	•	•	•	•			•	•	•	•						•	•	7											
Q45							•	•	•	•	•			•	•	•	•						•	•	5											
G35							•	•	•	•	•			•	•	•	•						•	•	5											
G35*							•	•	•	•	•			•	•	•	•						•	•	5											
QX56							•	•	•	•	•			•	•	•	•						•	•	5											
FX35							•	•	•	•	•			•	•	•	•						•	•	5											
FX45							•	•	•	•	•			•	•	•	•						•	•	5											
<b>Nissan</b>																																				
Altima							•	•	•	•	•			•	•	•	•							•	•	5		<p>High: Pin6 OBDII Low: Pin14 OBDII</p> <p>High: Blue Low: Pink</p>								
Maxima							•	•	•	•	•			•	•	•	•						•	•	5											
350Z							•	•	•	•	•			•	•	•	•						•	•	5											
Frontier							•	•	•	•	•			•	•	•	•						•	•	5											
Titan							•	•	•	•	•			•	•	•	•						•	•	5											
Quest							•	•	•	•	•			•	•	•	•						•	•	5											
Xterra							•	•	•	•	•			•	•	•	•						•	•	5											
Pathfinder							•	•	•	•	•			•	•	•	•						•	•	5											
Murano							•	•	•	•	•			•	•	•	•						•	•	5											
Murano*							•	•	•	•	•			•	•	•	•						•	•	5											
Armada							•	•	•	•	•			•	•	•	•						•	•	5											
<b>GM</b>																																				
All models							★	★	Compatibility list still development, to be released soon. Présentement en développement, disponible bientôt.																											


★ Disarm with Passat06 module only

\* Model with Inteli-Key See <http://support.fortinautoradio.com> for the latest information


Pictures available on web site

# Wiring Schematic Configurations (See vehicle compatibility guide/Voir guide de compatibilité)

## Configuration 1

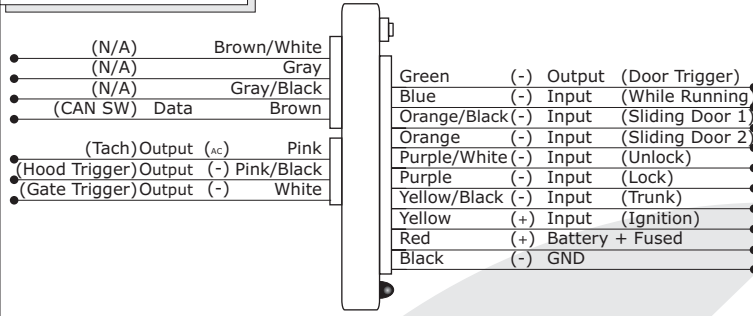


## Configuration 2

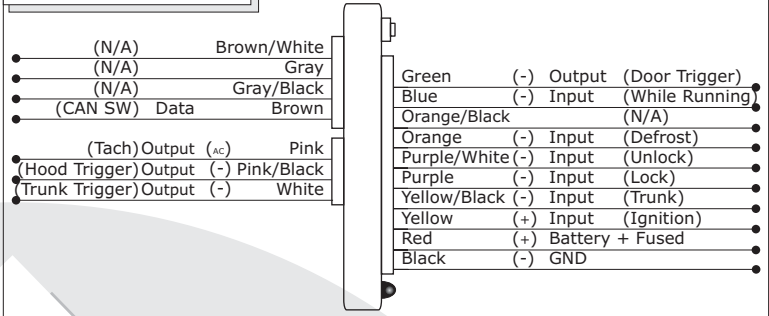


Note : The defrost light doesn't turn ON


## Configuration 3

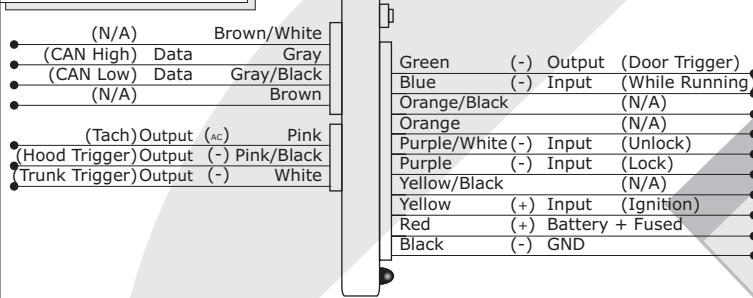


## Configuration 4

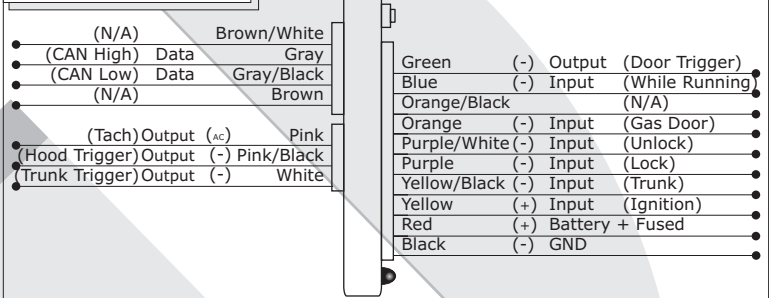


## Configuration 5

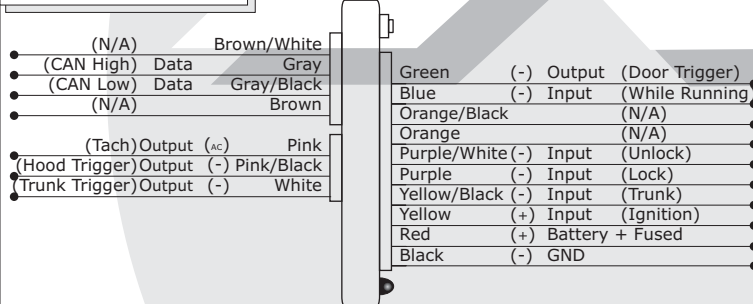


## Configuration 6

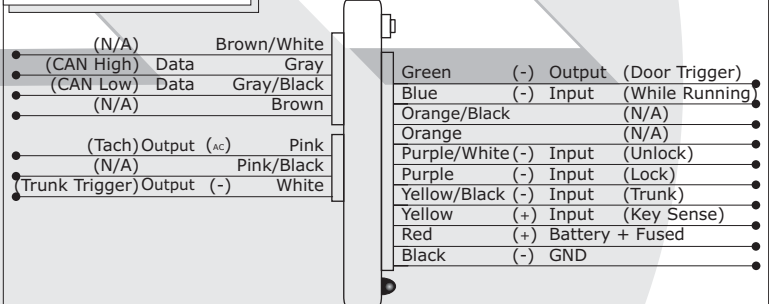


## Configuration 7

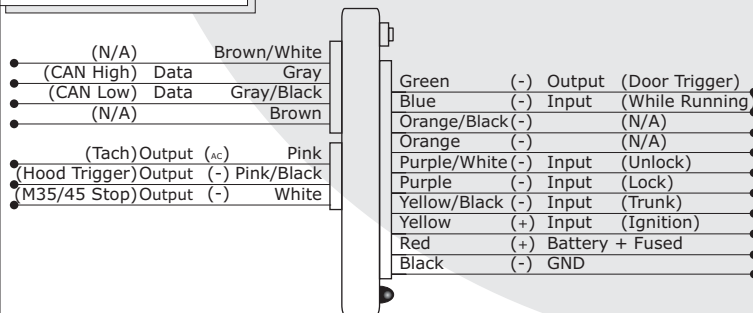

## Configuration 8

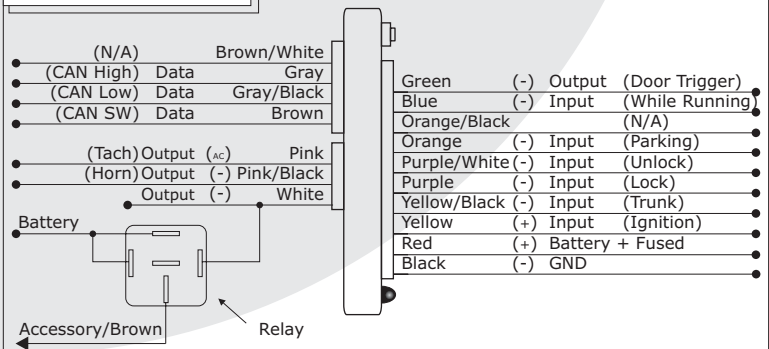

## Configuration 9

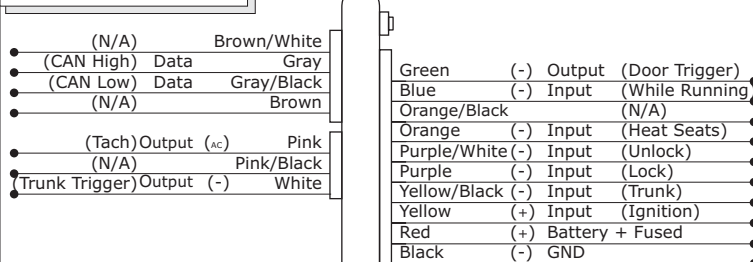

First pulse : Low power heat seats  
 Second pulse : High power heat seats  
 Third pulse : Heat seats OFF

## Configuration 10

